



Key No.	Part No.	Description	Price	Key No.	Part No.	Description	Price
	T130	WRENCH	2.59	37	GX4659	DRAG WASHER 'B'	1.46
1	GX4051	FRAME	7.99	38	GX4653	DRAG WASHER 'D'	1.84
2	GX4151	WORM SHAFT	6.14	39	GX4451	ANTI-REVERSE	1.84
3	GX4158	WORM GEAR GUARD	3.69	40	GX4256	PINION GEAR ASSY	2.83
4	GX4201	LINE GUIDE CARRIER ASSY	5.83	41	GX4103	RIGHT SIDE COVER	9.15
5	GX4202	LINE GUIDE PAWL	1.66	42	GX4452	ANTI-REVERSE PAWL	.91
6	GX4204	LINE GUIDE CARRIER SCR	1.78	44	GX4259	SPOOL TENSION KN. ASSY	2.04
7	GX4159	CARRIER GUIDE	1.72	45	GX4352	RIGHT SIDE CVR SCR	1.16
8	GX4160	FRAME FIXED PIN	1.46	46	GX4662	SPRING WASHER	1.53
9	GX4404	THUMB BAR	2.09	47	GX4663	STAR DRAG	7.06
10	GX4101	LEFT SIDE COVER ASSY	7.68	48	GX4660	HANDLE WASHER	1.23
11	GX4303	CONTROL DIAL ASSY	3.86	49	GX4701	HANDLE ASSY	6.32
12	GX4250	DIAL FRICTION RING	.56	50	GX4702	HANDLE NUT	.99
13	GX4251	SPOOL ASSY	10.99	51	GX4703	HANDLE NUT LOCK	.91
14	GX4261	MAGNET RETAINER SUPPORT	.91	52	GX4704	HANDLE NUT LOCK SCR	.42
15	GX4301	MAGNET RETAINER SPRING	.85	53	GX4104	FRAME SCREW	1.53
16	GX4108	SPOOL COVER ASSY	3.86	54	GX4302	SPOOL TNSN. KN. WSHR.(FL)	.49
19	GX4257	MAGNET PLATE ASSY	12.28	55	GX4506	LINK SCREW	.74
20	GX4602	MAGNET PLATE SCREW	1.28	56	GX4556	CLICK CLAW	.91
21	GX4351	SET PLATE ASSY	7.99	57	GX4258	SPOOL TENSION KN. RING	.91
22	GX4405	LINK	1.23	58	GX4254	RIGHT SIDE CVR BUSHING	2.21
23	GX4406	THUMB BAR CAM	.99	59	GX4105	SET PLATE SHAFT WSHR	.49
24	GX4401	PINION YOKE	1.16	60	GX4657	CRANK SHAFT E-CLIP	.49
25	GX4403	PINION YOKE SPR	.91	61	GX4664	SET PLATE SHAFT	1.23
26	GX4402	RELEASE SLIDER	2.27	62	GX4665	SHAFT CLIP-E	.49
27	GX4502	SPOOL REL. SPRING	.91	63	GX4305	SPOOL TEN. KN. WSHR (RB)	.49
28	GX4656	RELEASE SLIDER SCREW	.91	64	GX4304	SPOOL TEN. KN. WSHR (SQ)	.49
29	GX4150	OSCILLATOR GEAR	3.14				
30	GX4109	FRAME SCREW WSHR	.49				
32	GX4655	CONTROL ELEMENT	1.23				
33	GX4652	CRANK SHAFT	3.69				
36	GX4651	DRIVE GEAR	3.80				