


SPECIFICATIONS :

Hvy FW / Med. Lt. SW
 225 yds / 12 lb Line Capacity
 Ball Bearings:
 BR160 - 1 B.B.
 BR360 / BR360A - 3 B.B.
 4.8:1 Gear Ratio
 13.8 oz.

FEATURES :

Front Drag
 Balanced Rotor
 Oversized Twist Reducer Line Roller
 POSI-Loc Selective Anti-Reverse (15 stop)
 Aluminum Long Stroke Max-Cast Spool
 Color: BR160 / 360 - Light Tan
 BR360A - Dark Grey

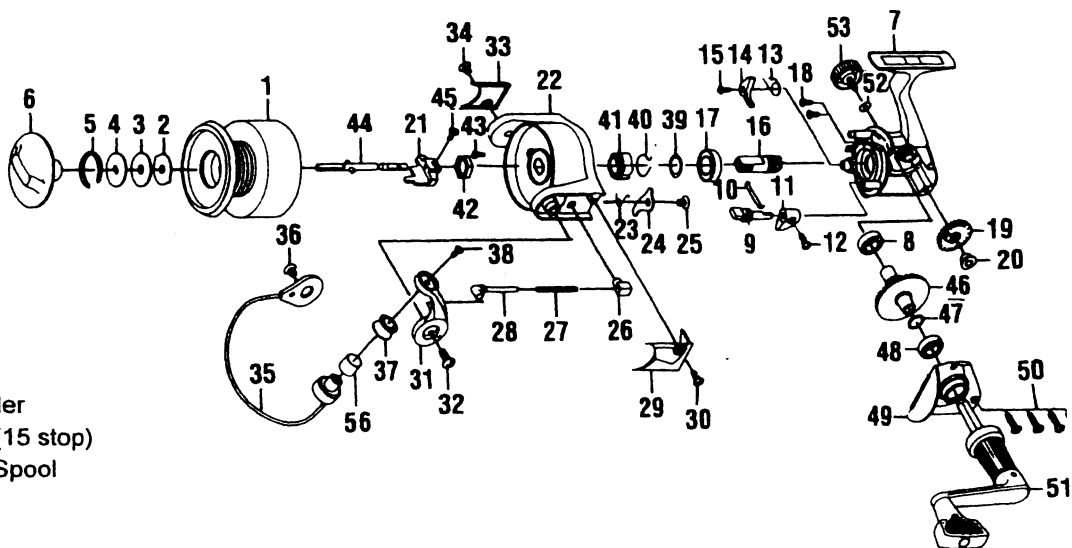

Key No.	Part No.	DESCRIPTION	Price	Key No.	Part No.	DESCRIPTION	Price
1	BH321-41	Spool Assembly	8.22	29	N / A	Arm Lever Cover (BR360A)	1.80
1	N / A	Spool Assembly (BR360A)	8.22	30	BH085-11	Cover Screw	0.40
2	BH081-21	Spool Washer "A"	0.59	30	N / A	BH085-13 Cover Screw (BR360A)	0.40
3	BH033-21	Spool Washer "B"	0.64	31	BH007-12	Arm Lever	3.10
4	BH080-31	Spool Washer "D"	0.96	31	N / A	BH007-13 Arm Lever (BR360A)	3.10
5	BH038-21	Drag Retainer	1.01	32	BH044-11	Arm Lever Screw	0.60
6	BH332-41	Drag Knob Assembly	3.34	32	N / A	BH044-13 Arm Lever Screw (BR360A)	0.60
6	N / A	Drag Knob Assembly (BR360A)	3.34	33	BH024-31	Bail Holder Cover	1.75
7	BH001-41	Body (before A8 date code)	6.63	33	N / A	BH024-33 Bail Holder Cover (BR360A)	1.75
7	BH001-38	Body (after A8 date code)	6.63	34	BH085-11	Cover Screw	0.60
7	N / A	Body (BR360A)	6.63	34	N / A	BH085-13 Cover Screw (BR360A)	0.60
8	BH027-11	Bushing	0.77	35	BH347-42	Bail Assembly	6.60
8	N / A	BH027-12 Ball Bearing	6.58	35	N / A	BH347-47 Bail Assembly (BR360A)	6.60
9	BH090-11	Stopper Cam	1.60	36	BH044-11	Bail Holder Screw	0.60
10	BH089-11	Stopper Cam Spring	0.96	36	N / A	BH044-13 Bail Holder Screw (BR360A)	0.60
11	BH059-11	Stopper Lever	1.08	37	BH004-12	Line Roller	3.10
11	N / A	BH059-14 Stopper Lever (BR360A)	1.08	38	BH108-11	Bail Screw	0.42
12	BH135-11	Stopper Lever Screw	0.64	38	N / A	BH108-13 Bail Screw (BR360A)	0.42
12	N / A	BH135-12 Stopper Lever Screw (BR360A)	0.64	39	BH110-31	Bearing Washer	0.54
13	BH061-11	Stopper Spring	0.46	40	BH086-31	Silent Spring	1.65
14	BH063-32	Stopper	1.53	41	BH060-32	Ratchet Gear	1.80
15	BH077-11	Stopper Screw	0.64	42	BH006-31	Rotor Nut	1.22
16	BH011-31	Pinion Gear (before A8 date code)	3.34	43	BH094-11	Rotor Nut Lock Screw	0.94
16	BH011-32	Pinion Gear (after A8 & BR360A)	3.34	44	BH315-41	Main Shaft Assembly	6.31
17	BH028-31	Ball Bearing (before A8 date code)	7.43	45	BH100-11	Main Shaft Screw	0.64
17	BH028-32	Ball Bearing (after A8 & BR360A)	7.43	46	BH012-31	Driver Gear	5.52
18	BH041-11	Bearing Screw	0.64	47	BH026-11	Adjust Washer	0.69
19	BH053-31	O/S Gear	1.69	48	BH027-11	N / A Bushing	0.77
20	BH158-11	O/S Gear Bushing	0.98	48	N / A	BH027-12 Ball Bearing	6.58
21	BH025-31	O/S Slider	2.71	49	BH023-41	Body Cover	5.30
22	BH009-41	Rotor	6.90	49	N / A	BH023-46 Body Cover (BR360A)	5.30
22	N / A	BH009-42 Rotor (BR360A)	6.90	50	BH057-11	Body Cover Screw	0.64
23	BH049-41	Kick Lever Spring	0.96	50	N / A	BH057-13 Body Cover Screw (BR360A)	0.64
24	BH019-41	Kick Lever	1.97	51	BH318-31	Handle Assembly	7.69
25	BH136-11	Kick Lever Screw	0.64	51	N / A	BH318-37 Handle Assembly (BR360A)	7.69
26	BH020-11	Spring Holder	0.96	52	BH105-11	Handle Cap Washer	0.47
27	BH022-41	Arm Lever Spring	0.64	53	BH073-31	Handle Screw Cap	3.23
28	BH031-31	Spring Shaft	0.96	53	N / A	BH073-33 Handle Screw Cap (BR360A)	3.23
29	BH046-41	Arm Lever Cover	2.76	56	BH016-11	Line Roller Bushing	1.06

☐ = These parts are not interchangeable with parts from different date code (ie., use Pinion Gear before A8 along with Ball Bearing and Body before A8)